



BioShield18

Ultraviolet Treatment Systems

ELECTRICAL INPUT: 24V DC 50/60Hz 1A

WARNING: AVOID EXPOSING UNPROTECTED EYES AND BARE SKIN TO UV-C

REPLACE LAMP ANNUALLY OR AS ADVISED

To order replacement lamp: www.BioShieldUV.com



STEP 1:



Use a 2-1/4" drill to create two openings


OR

STEP 1:



Make a starting hole and then use a metal shear to create two openings

STEP 2:

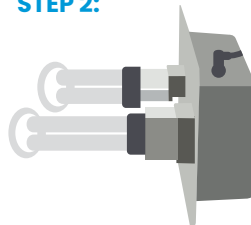

Test fit the device to ensure proper fit for flush mount

STEP 3:



Use sheet metal screws provided to secure the UV air sanitizer

INSTALLATION TEMPLATE



For 2-1/4" Drill Bit

Place this label on desired location for installation

Caution

Cut hole only in ductwork to prevent accidental cutting of wires or refrigerant pipes



For 2-1/4" Drill Bit